

# QUICKIE GP SERIES

# Quickie® GP Series

Supplier: This manual must be given to the rider of this wheelchair.

Rider: Before using this wheelchair, read this entire manual and save

it for future reference.

Owner's Manual

# Quickie® GP Serie

Distribuidor: Este manual debe ser entregado al pasajero de esta

silla de ruedas.

Pasalero: Antes de usar esta silla de ruedas, lea este manual en

su totalidad y guárdelo para futura referencia.

Cada una de las sillas se envía con un manual de instrucciones en inglés. El manual en español o francés está disponible en formato PDF en nuestra página en Internet: www.SunriseMedical.com. Ingrese a la página del producto específico para descargar el manual, o comuníquese con el proveedor autorizado de Sunrise Medical.

Manual de Instrucciones

# Quickie® GP Séries

Fournisseur : Ce manuel doit être remis à l'utilisateur / utilisatrice de ce fauteuil roulant.

Utilisateur / Utilisatrice : Avant d'utiliser ce fauteuil roulant, lisez entièrement ce manuel et conservez le pour le consulter ultérieure-

Chaque fauteuil est livré avec un manuel d'instructions en anglais. Les versions en espagnol et en français sont à votre disposition en format PDF sur le site : www.SunriseMedical.com. Veuillez vous rendre à la page de votre produit pour télécharger le manuel dans la langue souhaitée, ou contactez un fournisseur agréé Sunrise Medical.

Mode d'emploi





#### SUNRISEMEDICALLISTENS

Thank you for choosing a Quickie wheelchair. We want to hear your questions or comments about this manual, the safety and reliability of your chair, and the service you receive from your Sunrise supplier. Please feel free to write or call us at the address and telephone number below:

### Sunrise Medical (US) LLC

Customer Service Department 12002 Volunteer Blvd. Mount Juliet, TN 37122, USA (800) 333-4000

Be sure to return your warranty card, and let us know if you change your address. You can also register your wheelchair at: www.SunriseMedical.com/help-support/register-my-wheelchair. This will allow us to keep you up to date with information about safety, new products, and options to increase your use and enjoyment of this wheelchair.

#### **FORANSWERSTOYOURQUESTIONS**

Your authorized supplier knows your wheelchair best, and can answer most of your questions about chair safety, use and maintenance. For future reference, fill in the following:

Supplier:		
Address:		
Telephone:		
Serial #:	Date/Purchased:	

#### ADDITIONAL INFORMATION YOU SHOULD KNOW

No component of this chair was made with Natural Rubber Latex.



#### Disposal and recycling information:

When this product reaches the end of its life, please take it to an approved collection or recycling point designated by your local or state government. This wheelchair is manufactured using a variety of materials. Your product should not be disposed of as ordinary household waste. You should dispose of your wheelchair properly, according to local laws and regulations. Most materials that are used in the construction of this product are fully recyclable. The separate collection and recycling of your product at the time of disposal will help conserve natural resources and ensure that it is disposed in a manner that protects the environment.


Ensure you are the legal owner of the product prior to arranging for the product disposal in accordance with the above recommendations.



www.SunriseMedical.com /help-support/registermy-wheelchair


# II. TABLE OF CONTENTS


I.	INTRODUCTION	2		J. Rear Wheels	13
II.	TABLE OF CONTENTS	3		K. Rear Wheel Locks	13
III.	YOUR CHAIR AND ITS PARTS	4		L. Modified Seat Systems	13
IV.	NOTICE - READ BEFORE USE	5		M.Seat and Back Upholstery	14
	A. Choose the Right Chair & Safety Options	5		N.Backrest Tension Adjustable	
	B. Review This Manual Often	5		O.Folding Lock Down Adjustable Backrest	14
	C. Warnings	5		P. Caster Pin Locks	
٧.	GENERAL WARNINGS	5	VIII.	USE AND MAINTENANCE	15
	A. Weight Limit	5		A. Introduction	15
	B. Intended Use	5		B. Critical Safety Checks	15
	C. Attendants and Caregivers	5		C. Cleaning	
	D.Accessories	5		D.Safety Checklist	15
	E. Know Your Chair	5		E. Troubleshooting Chart	15
	F. Reduce The Risk of an Accident	6		F. To Mount and Remove Rear Wheels	16
	G.Safety Checklist	6		G.Wheel Locks	16
	H.Changes & Adjustments	6		H.Anti-tips	16
	I. Environmental Conditions	6		I. Single Post Height Adjustable Armrests	17
	J. Terrain	6		J. Padded Swing-away Armrests	
	K. Street Use	6		K.Platform Flip-up Footplate	
	L. Motor Vehicle Safety	6		L.Swing in/out hangers and footrests	
	M.When You Need Help	7		M.Cushion Installation	18
VI.	SAFETY WARNINGS: FALLS & TIP-OVERS	8		N. Sideguard	19
	A. Center of Balance	8		O. Storage Tips	
	B. Dressing or Changing Clothes	8		P. Inspect	
	C. Obstacles	8	IX	DEALER SERVICE AND ADJUSTMENT	
	D.Front Caster Lift	8		A. Dealer Service Introduction	
	E. Reaching or Leaning	8		B. Critical Maintenance Tips	
	F. Moving Backward	8		C. Cleaning	20
	G.Escalators	9		D.Rear Wheel Axle Nut Adjustment	
	H.Ramps, Slopes & Sidehills	9		E. Rear Axles	20
	I. Transfer	10		F. Wheel Locks	21
	J. Curbs & Single Steps	10		G.Anti-tip Receivers	21
	K. Climbing a Curb or Single Step	П		H.Single Post Armrest Receiver	22
	L. Descending a Curb or Single Step	П		I. Padded Swing-away Armrest Receiver	
	M.Stairs	П		J. Swing-away Height adjustment	22
	N.Climbing Stairs	П		K. Fixed Front Footrest	22
	O.Descending Stairs	П		L.Angle Adjustable Footplate	23
VII.	WARNINGS: COMPONENTS & OPTIONS	12		M.Platform Flip-Up Footplate	23
	A. Anti-Tip Tubes	12		N.Articulating Legrest	
	B. Armrests	12		O.Elevating Legrest	
	C. Cushion & Sling Seats			P. Caster Forks	
	D.Fasteners	12		Q.Casters	24
	E. Footrests	12		R.Backrest Tension Adjustable	25
	F. Pneumatic Tires	12		S.Backrest	
	G.Positioning Belts Option	13		T. Side Guard	26
	H.Push Handles Option	13		U.Seat Sling	26
	I. Quick-Release Axles	13	X.	SUNRISE LIMITED WARRANTY	28

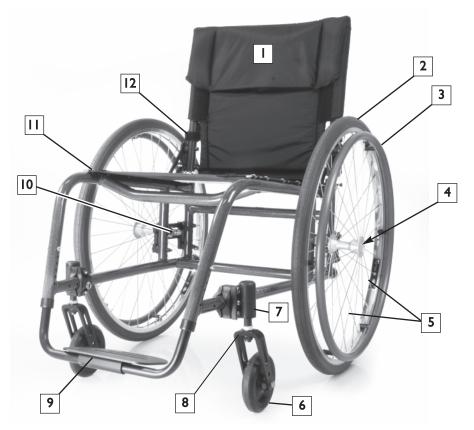


- I. Adjustable Backrest upholstery (option)
- 2. Tire
- 3. Handrim
- 4. Quick Release Axle
- 5. Spokes
- 6. Caster wheel

 
- 7. Caster housing
- 8. Caster fork
- 9. Footrest
- 10. Axle Plate
- 11. Seat Sling
- 12. Backrest Bracket

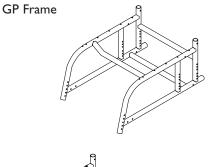

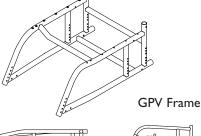





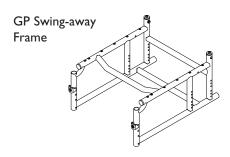

#### **QUICKIE GP SERIES SPECIFICATIONS**

#### Chair Parts

Standard Black

#### Color

Quickie colors

#### Splatter

Black, teal chase, purple chase

#### Frame Dimensions

Frame width: Standard - 12"-20"
Frame height: Standard - 10" front, 9" rear
Option - 9 1/4" front, 8 1/4" rear, 11" front, 10"
rear, Sling depth: Standard -15"
Option - 14", 16", 17", 18"

Backrest

Non-folding - fixed: 8"-16"

Cushion: 2", 3", 4"

Folding - adjustable: Standard - 11"-14"
Option - 12"-16", 16"-20", 14"-18", push handles,

adjustable upholstery

#### Footrest (GPSA only)

(60°, 70°, 90°) Swing in/out hangers. Standard - rigid, composite

Option - platform, platform flip-up, foam, 90 degree footboard, extension tubes.

# Casters

Standard - 5" polyurethane
Option - 3" micros, 6" pneumatic or
polyurethane, 3/4" longer fork stem bolt,
I 1/2" longer fork stem bolt,
multi-positioning caster plate, caster pin locks,
quick-release caster stems

#### Armrests

Option - padded swing-away, height-adjustable, Stroller handles.

Option - regular, tall

#### Axle Plate

Standard - Adjustable axle plate Option - Double slot index, amputee

#### **Axles**

Standard - Stainless steel

Option - Titanium, quad-release axle nuts

#### Anti-tip

Option - Rear anti-tip tubes

#### Rear wheels

Tire types Standard Rear wheels Standard - Spoke, Option - Mag

#### Tire size

Standard - 24", Option - 22", 26"

#### Tire types

Standard - pneumatic

Option - Pneumatic w/airless insert, full-profile polyurethane, low-profile polyurethane, Kevlar, high-pressure clinchers, latex tubular, turbo tread, tennis, basketball, heat-treated tennis, heat-treated basketball

#### Hand rims

Standard - Aluminum

Option - Plastic-coated, long tabs

#### **Projections**

Option - Vertical, Oblique - 6,8,10,12

#### Wheel locks

Standard - Low mount

Option - High-push, high-pull, high scissor, swing-away, 6" or 9" extension handles

All features may not be available with some chair setups or in conjunction with another chair feature. Please consult your authorized supplier for more information.

#### A. CHOOSE THE RIGHT CHAIR & SAFETY OPTIONS

Sunrise provides a choice of many wheelchair styles to meet your needs. This product is intended for single person use only. Final selection of the type of wheelchair, options and adjustments rests solely with you and your health care professional. Choosing the best chair for your unique mobility needs, will depend on such things as:

- 1. Your disability, strength, balance and coordination.
- The types of hazards you must overcome in daily use (where you live and work, and other places you are likely to use your chair).
- The need for options that will improve your positioning, safety and comfort (such as anti-tip tubes, positioning belts, or special seating systems).

#### **B. REVIEW THIS MANUAL OFTEN**

Before using this chair you, and each person who may assist you, should read this entire manual and make sure to follow all instructions. Review the warnings often, until they are second nature to you.

# C. WARNINGS 🛕

The word "WARNING" refers to a hazard or unsafe practice that may cause severe injury or death to you or to other persons. The "Warnings" are in three main sections, as follows:

#### I. V — GENERAL WARNINGS

Here you will find a safety checklist and a summary of risks you need to be aware of before you ride this chair.

#### 2. VI- SAFETY WARNINGS: FALLS & TIP-OVERS

Here you will learn about practices for the safe use of your chair, and how to avoid a fall or tip-over while you perform daily activities in your chair.

#### 3. VII — WARNINGS — COMPONENTS & OPTIONS

Here you will learn about the components of your chair and options you can select for safety. Consult your authorized supplier and your health care advisor to help you choose the best set-up and options for safe use.

NOTE— Where they apply, you will also find "Warnings" in other sections of this manual. Heed all warnings in these sections. If you fail to do so a fall, tip-over or loss of control may occur and cause severe injury to the rider or others.

#### V. GENERAL WARNINGS

#### A. WEIGHT LIMIT

# **A** WARNING

NEVER exceed the weight limit specified by Sunrise Medical. The weight capacity provided by your manufacturer is for the combined weight of a rider and items carried using on-board storage. If you do exceed the weight limit, damage to your chair, a fall, tip-over or loss of control may occur and cause severe injury to the rider or others.

Weight Capacity

Quickie GP Series - 250lbs / (113kg).

#### B. INTENDED USE

The GP Series wheelchair's intended use is to provide mobility to persons limited to a sitting position.

# **A**WARNING

DO NOT use this device for purposes other than what is intended by the manufacturer

- The wheelchiar is not designed for weight training and is unsafe for use as a seat while weight training. Weight training from the wheelchair substantially changes the stability of the chair and may cause tipping.
- 2.  $\,$  DO NOT stand on the frame of the wheelchair.
- NEVER allow someone to stand on your chair or use it as a step ladder.
- 4. This chair is designed for a single rider only.
- 5. Unauthorized modifications and use of parts or accessories not supplied or approved by Sunrise Medical may change the chair structure. This will void the warranty and may cause a safety hazard. If the warning is ignored, damage to your chair, and the potential severe injury of the person using the chair for unintended purposes can occur.

# C. ATTENDANTS AND CAREGIVERS

# **A**WARNING

Before you assist a rider, be sure to read all warnings contained in this manual, and follow all instructions that apply. Be aware that after consulting a healthcare advisor, you will need to learn safe and proven body mechanics to use and create assistive methods best suited to your abilities.

#### D. ACCESSORIES

# **A**WARNING

Unauthorized modifications or use of parts, or accessories not supplied or approved by Sunrise Medical may change the chair structure. This will void the warranty and may cause a safety hazard.

Some problems that may occur, but are not limited to:

- I. Incorrect Wheels and/or tires that put the rider at risk of a fall or tip-over.
- Adding a component to the frame, changing the structural integrity of the chair.
- 3. Any modification or disassembly can potentially create an unsafe situation where rider and/or attendant are put at risk.

#### E. KNOW YOUR CHAIR

# **A**WARNING

Every wheelchair is different. Take the time to learn the feel of this chair before you begin riding. Start slowly, with easy, smooth strokes. If you are used to a different chair, you may use too much force and tip over. If you use too much force, damage to your chair, a fall, tip-over or loss of control may occur and cause severe injury to the rider or others.

# F. REDUCE THE RISK OF AN ACCIDENT

# **A**WARNING

- BEFORE you begin riding, you should be trained in the safe use of this chair by your health care advisor.
- Practice bending, reaching and transfers until you know the limit of your ability. Have someone help you until you know what can cause a fall or tip-over and how to avoid doing so.
- Be aware that you must develop your own methods for safe use best suited to your level of function and ability.
- NEVER try a new maneuver on your own. Ask the advice of your health care provider to lower the risk of a fall or tip over.
- Get to know the areas where you plan to use your chair. Look for hazards and learn how to avoid them.

#### G. SAFETY CHECKLIST

# **A**WARNING

Before Each Use Of Your Chair:

- Make sure the chair rolls easily and that all parts work smoothly. Check for noise, vibration, or a change in ease of use. (This may indicate low tire pressure, loose fasteners, or damage to your chair).
- Immediately repair any problem. Your authorized supplier can help you find and correct the problem.
- Check to see that both quick-release rear axles are locked. When locked, the axle button will "pop out" fully. If not locked, the wheel may come off and cause you to fall.
- 4. If your chair has anti-tip tubes, lock them in place.

#### H. CHANGES & ADJUSTMENTS

# **A**WARNING

- If you modify or adjust this chair, it may increase the risk of a tip-over UNLESS you make other adjustments as well.
- Consult your authorized dealer BEFORE you modify or adjust your chair.
- 3. We recommend that you use anti-tip tubes until you adapt to the change, and are sure you are not at risk to tip over.
- 4. Unauthorized modifications by the end-user, dealer or any other individual, including the use of parts not supplied or approved by Sunrise may change the chair structure. This will void the warranty and may cause a safety hazard.

If you fail to heed these warnings damage to your chair, a fall, tip-over or loss of control may occur and cause severe injury to the rider or others.

#### I. ENVIRONMENTAL CONDITIONS

## **A**WARNING

- Use extra care if you must ride your chair on a wet or slick surface.
   If you are in doubt, ask for help.
- Contact with water or excess moisture may cause your chair to rust or corrode. Avoid all extreme weather situations if possible.
  - a. Do not use your chair in a shower, pool or other body of water. The chair tubing and parts are not water-tight and may rust or corrode from the inside.
  - Avoid excess moisture (for example, do not leave your chair in a damp bathroom while taking a shower).
  - Dry your chair as soon as you can if it gets wet, or if you use water to clean it.

If you fail to heed these warnings damage to your chair, a fall, tip-over or loss of control may occur and cause severe injury to the rider or others.

#### J. TERRAIN

## **A**WARNING

- Based on ANSI/RESNA testing, Sunrise Medical recommends the use of a caster wheel with a minimum diameter of 5", if the wheelchair will be overcoming obstacles up to 1/2" on a regular basis.
- Your chair is designed for use on firm, even surfaces such as concrete, asphalt, indoor flooring, and carpets.
- 3. Do not operate your chair in sand, loose soil, or over rocky terrain.
- 4. If you use your chair on terrain that is rougher than described above there is a danger that screws and bolts will loosen prematurely, and that damage to wheels or axles could put the rider at risk of a fall, tip-over, or loss of control.

If you fail to heed these warnings damage to your chair, a fall, tip-over or loss of control may occur and cause severe injury to the rider or others.

#### K. STREET USE

# **A**WARNING

- I. This product is not intended for street use.
- 2. Avoid streets whenever possible.
- Obey and follow all legal pedestrian pathways, and laws that apply to pedestrians.
- Be alert to the danger of motor vehicles in parking lots, or if you must cross a road.

If you fail to heed this warning, damage to your chair, and a possible collision may occur and cause severe injury to the rider or others.

#### L. MOTOR VEHICLE SAFETY

If possible and feasible, the rider should transfer to the Original Equipment Manufacturer vehicle seat and use the OEM vehicle restraint.

# **A**WARNING

If your chair is **NOT** equipped with the Transit Option:

- 1. NEVER let anyone sit in this chair while in a moving vehicle.
  - a. ALWAYS move the rider to an approved vehicle seat.
  - b. ALWAYS secure the rider with proper motor vehicle restraints.
- In an accident or sudden stop the rider may be thrown from the chair. Wheelchair seat belts will not prevent this, and further injury may result from the belts or straps.
- NEVER transport this chair in the front seat of a vehicle. It may shift and interfere with the driver.
- 4. ALWAYS secure this chair so that it cannot roll or shift.
- 5. Do not use any chair that has been involved in a motor vehicle accident. The frame and/or components may have been changed due to the accident. Such items could be, but are not limited to: bent, loosened, and/or broken components that were subjected to an impact.

Failure to heed these warnings puts you and others that may assist you at a high risk of injury.

#### M. WHEN YOU NEED HELP

# **A**WARNING

For The Rider: Make sure that each person who helps you reads and follows all warnings and instructions that apply.

#### For Attendants:

- Work with the rider's doctor, nurse or therapist to learn safe methods best suited to your abilities and those of the rider.
- Tell the rider what you plan to do, and explain what you expect the rider to do. This will put the rider at ease and reduce the risk of an accident.
- Make sure the chair has push handles. They provide secure points for you to hold the rear of the chair to prevent a fall or tip-over. Check to make sure push handle grips will not rotate or slip off.
- 4. To prevent injury to your back, use good posture and proper body mechanics. When you lift or support the rider or tilt the chair, bend your knees slightly and keep your back as upright and straight as you can.
- 5. Remind the rider to lean back when you tilt the chair backward.
- When you descend a curb or single step, slowly lower the chair in one easy movement. Do not let the chair drop the last few inches to the ground. This may damage the chair or injure the rider.
- To avoid tripping, unlock and rotate anti-tip tubes up, out of the way.
- Whenever you aren't attending the wheelchair, ALWAYS use the wheel-lock to secure the rear wheels, and lock the anti-tip tubes in place.

If you fail to ask for help when in doubt, you run a high risk of a fall, tipover or loss of control that may occur and cause severe injury to the rider or others.

#### A. CENTER OF BALANCE

# **A**WARNING

The point where this chair will tip forward, back or to the side depends on its center of balance and stability. How your chair is set up, the options you select and the changes you make may affect the risk of a fall or tip-over.

- I. The Most Important Adjustment Is:
  - The position of the rear wheels. The more you move the rear wheels forward, the more likely your chair will tip over backward.
- 2. The Center Of Balance Is Also Affected By:
  - a. A change in the set-up of your chair, including:
    - · The distance between the rear wheels.
    - · The amount of rear wheel camber.
    - · The seat height and seat angle.
    - Backrest angle.
  - b. A change in your body position, posture or weight distribution.
  - c. Riding your chair on a ramp or slope.
  - d. A back pack or other options and the amount of added weight.
- 3. To Reduce The Risk Of An Accident:
  - Consult your doctor, nurse or therapist to find out what axle and caster position is best for you.
  - b. Consult your authorized supplier BEFORE you modify or adjust this chair. Be aware that you may need to make other changes to correct the center of balance.
  - Have someone help you until you know the balance points of your chair and how to avoid a tip-over.
  - d. Use anti-tip tubes.

If you fail to heed these warnings, you are at a high risk of a fall, tip-over or loss of control that could cause severe injury to the rider or others.

#### **B. DRESSING OR CHANGING CLOTHES**

# **A**WARNING

Your weight may shift if you dress or change clothes while seated in this chair.

To reduce the risk of a fall or tip-over:

- Rotate the front casters until they are as far forward as possible.
   This makes the chair more stable.
- 2. Lock anti-tip tubes in place. (If your chair does not have anti-tip tubes, back it up against a wall and lock both rear wheels).

If you fail to heed this warning, damage to your chair, a fall, tip-over or loss of control may occur and cause severe injury to the rider or others.

#### C. OBSTACLES

## **A**WARNING

Riding over curbs or obstacles can cause tipping and serious bodily harm. If you have any doubt that you can safely cross any curb or obstacle, ALWAYS ASK FOR HELP. Be aware of your riding skills and personal limitations. Develop new skills only with the help of a companion.

To avoid the risk of traversing obstacles:

- Keep a lookout for danger scan the area well ahead of your chair as you ride.
- Make sure the floor areas where you live and work are level and free of obstructions.
- 3. Remove or cover threshold strips between rooms.
- 4. Install a ramp at entry or exit doors. Make sure there is not a drop off at the bottom of the ramp.
- 5. To Help Correct Your Center Of Balance:
  - a. Lean your upper body FORWARD slightly as you go UP over an obstacle.
  - Press your upper body BACKWARD as you go DOWN from a higher to a lower level.
- 6. If your chair has anti-tip tubes, do not go over an obstacle without

- Keep both of your hands on the handrims as you go over an obstacle
- 8. Never push or pull on an object (such as furniture or a doorjamb) to propel your chair.

If you fail to heed these warnings damage to your chair, a fall, tip-over or loss of control may occur and cause severe injury to the rider or others.

#### D. FRONT CASTER LIFT

# **A**WARNING

Front caster lift can occur when the front wheels, ordinarily in contact with the ground, are either intentionally, or unintentionally caused to lift from the ground while the rear wheels remain in contact. Pitch control (partial or full) should NEVER be attempted without consulting your healthcare advisor and making sure that anti-tips are installed.

If you fail to heed this warning, you are at a high risk of damage to your chair, a fall, tip-over or loss of control that may occur and cause severe injury to the rider or others.

#### E. REACHING OR LEANING

# **A**WARNING

If you reach or lean it will affect the center of balance of your chair. This may cause you to fall or tip over. When in doubt, ask for help or use a device to extend your reach.

- NEVER reach or lean if you must shift your weight sideways or rise up off the seat.
- NEVER reach or lean if you must move forward in your seat to do so. Always keep your buttocks in contact with the backrest.
- NEVER reach with both hands (you may not be able to catch yourself to prevent a fall if the chair tips).
- NEVER reach or lean to the rear unless your chair has anti-tip tubes locked in place.
- DO NOT reach or lean over the top of the seat back. This may damage one or both backrest tubes and cause you to fall.
- 6. If You Must Reach Or Lean:
  - a. Do not lock the rear wheels. This creates a tip point and makes a fall or tip-over more likely.
  - b. Do not put pressure on the footrests.
  - Move your chair as close as you can to the object you wish to reach.
  - d. Do not try to pick up an object from the floor by reaching down between your knees. You are less likely to tip if you reach to the side of your chair.
  - e. Rotate the front casters until they are as far forward as possible. This makes the chair more stable.
  - f. Firmly grasp a rear wheel or an armrest with one hand. This will help to prevent a fall if the chair tips.

If you fail to heed these warnings damage to your chair, a fall, tip-over or loss of control may occur and cause severe injury to the rider or others.

#### F. MOVING BACKWARD

# **A**WARNING

Use extra care when you move your chair backward. Your chair is most stable when you propel yourself forward. You may lose control or tip over if one of the rear wheels hits an object and stops rolling.

- I. Propel your chair slowly and smoothly.
- 2. If your chair has anti-tip tubes, make sure to lock them in place.
- 3. Stop often and check to be sure your path is clear.

If you fail to heed this warning, you are at a high risk of damage to your chair, a fall, tip-over or loss of control that may occur and cause severe injury to the rider or others.

#### G. ESCALATORS

## **A**WARNING

NEVER use this chair on an escalator, even with an attendant. If you do, a fall or tip-over is likely.

If you fail to heed this warning you and others that may be assisting you, are at a high risk of severe injury.


# H. RAMPS, SLOPES & SIDEHILLS 1 2 3 4

# **A**WARNING

Whenever possible, avoid riding on a slope, which includes a ramp or sidehill. This will change the center of balance of your chair. Your chair is less stable and more difficult to manuever. when it is at an angle. When moving up a hill, anti-tip tubes may not prevent a fall or tip-over.


- 1. DO NOT use your chair on a slope steeper than 6%. (A 6% slope means: one foot in elevation for every 16.6 feet of slope length.)
- ALWAYS go as straight up and as straight down as you can. (Do not "cut the corner" on a slope or ramp.)
- 3. DO NOT turn or change direction on a slope.
- 4. When you have to use a ramp, always stay in the CENTER of the ramp. Make sure ramp is wide enough that you have no risk of going off the edge.
- 5. **DO NOT** stop on a steep slope. If you stop, you may lose control of your chair.
- NEVER use rear wheel locks to try to slow or stop your chair. This is likely to cause your chair to veer out of control.
- 7. ALWAYS be aware of:
  - a. Wet or slippery surfaces.
  - A change in grade on a slope (or a lip, bump or depression). These may cause a fall or tipover.
  - c. A drop-off at the bottom of a slope or ramp. A drop-off as small as 3/4 inch can stop a front caster and cause the chair to tip forward.
- 8. To Reduce The Risk Of A Fall Or Tip-Over:
  - a. Lean or press your body UPHILL. This will help adjust for the change in the center of balance caused by the slope or sidehill.
  - Keep pressure on the handrims to control your speed on a down slope. If you go too fast you may lose control.
  - c. ASK FOR HELP any time you are in doubt.
- 9. Ramps At Home & Work– For your safety, ramps at home and work must meet all legal requirements for your area:
  - a. AVOID A DROP-OFF
    - Make sure there is a section at the top or bottom to smooth out the transition.
  - b. ALWAYS stay in the center of the ramp and control your speed.

If you fail to heed these warnings damage to your chair, a fall, tip-over or loss of control may occur and can possibly cause severe injury to the rider or others.

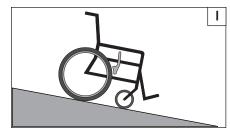


IF you need to go down a hill:

- a. The Downslope should be less than 6°.
- b. GO SLOW Control your speed.
- c. ALWAYS Go Straight down.
- d. Never turn on a hill.
- e. ALWAYS lean backward.

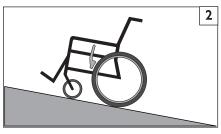


IF you need to go up a hill:

- a. The Upslope should be less than 6°.
- b. ALWAYS Go Straight up.
- c. DON'T STOP.
- d. NEVER turn on a hill.
- e. ALWAYS lean forward.

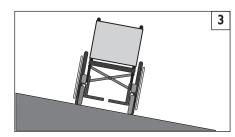

IF you need to traverse a Sidehill:

- a. The sidehill must be Less than 6° or you are at risk of a tip over.
- b. DON'T STOP.
- c. NEVER turn on a hill.

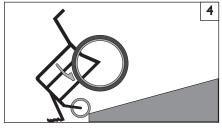

If you need to traverse a Ramp:

- a. Go Slowly.
- b. Watch out for Drop-offs.
- c. ALWAYS go straight up or straight down.
- d. Stay centered on the Ramp.

# I. TRANSFER 5 6

## **A**WARNING

It is dangerous to transfer on your own. It requires good balance and agility. Be aware that there is a point during every transfer when the wheelchair seat is not below you.

To avoid a fall:

- 1. Work with your health care advisor to learn safe methods for transfers.
  - a. Learn how to position your body and how to support yourself during a transfer.
  - b. Have someone help you until you learn safe transfer methods.
- 2. Lock the rear wheels before you transfer.
- 3. Be aware that the chair can still slide and/or tip. The wheel lock keeps the rear wheels from rolling while you are performing the transfer.
- 4. Make sure that the pneumatic tires are properly inflated. Low tire pressure may allow the rear wheel locks to slip. (see table in Section G "Pneumatic Tires"
- Move your chair as close as you can to the seat you are transferring to. If possible, use a transfer board.
- 6. Rotate the front casters until they are as far forward as possible.
- 7. If you can, remove the footrests, or swing them out of the way.
  - a. Make sure your feet do not catch in the space between the footrests.
  - b. Avoid putting weight on the footrests as this may cause the chair to tip.
- 8. Make sure armrests are removed, or out of the way and do not interfere with the transfer.
- Transfer as far back onto the seat surface as you can. This will reduce the risk that the chair will tip or move away from you.


If you fail to heed these warnings damage to your chair, a fall, tip-over or loss of control may occur and can possibly cause severe injury to the rider or others.

#### Optimum Transfer position



#### Before transferring:

- 1. Flip-back or remove the armrests.
- 2. Swing-away or remove the footrests.
- 3. Make sure the wheel lock is set.

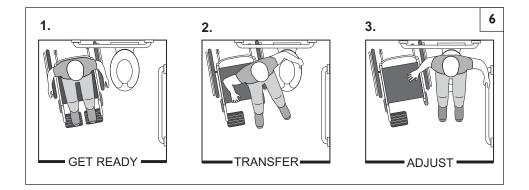

# J. CURBS & SINGLE STEPS 7


#### **A**WARNING

Before riding over curbs, and negotiating even a single step, ALWAYS ask for assistance first. Curbs and steps can cause tipping and serious bodily harm. When in doubt as to your ability to avoid, or traverse any obstacle, always ask for help. Be aware of your riding skills and personal limitations. Develop new skills only with the help of a companion.

For Attendant: Each person who assists the rider with curbs and steps should read and follow all instructions and warnings pertaining to attendants, and caregivers.

- 1. Do not try to climb a high curb or step (more than 4 inches high) UNLESS you have help. Doing so may cause your chair to exceed its balance point and tip over.
- Go straight up and straight down a curb or step. If you climb or descend at an angle, a fall or tip-over is likely.
- 3. Be aware that the impact of dropping down from a curb or step can damage your chair or loosen fasteners.

If you fail to heed these warnings damage to your chair, a fall, tip-over or loss of control may occur and can possibly cause severe injury to the rider or others.

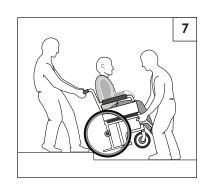

# K. CLIMBING A CURB OR SINGLE STEP 7

### **WARNING**

For Attendant: follow these steps to help the rider climb a curb or single step going FORWARD

- 1. Stay behind the chair.
- 2. Face the curb and tilt the chair up on the rear wheels so that the front casters clear the curb or step.
- Move forward, placing the front casters on the upper level as soon as you are sure they are past the edge.
- Continue forward until the rear wheels contact the face of the curb or step. Lift and roll the rear wheels to the upper level.

If you fail to heed these warnings damage to your chair, a fall, tip-over or loss of control may occur and cause severe injury to the rider or others.

## L. DESCENDING A CURB OR SINGLE STEP 7

# **A** WARNING

For Attendant:: Follow these steps to help a rider descend a curb or single step going BACKWARD:

- I. Stay at the rear of the chair.
- 2. Several feet before your reach the edge of the curb or step, tip the chair slightly and pull it backward.
- When the chair is at it's balance point, carefully step forwards until the rear wheels reach the edge of the curb or step. Then allow the rear wheels to slowly roll down onto the lower level.
- 4. Push the chair forward until you are standing on the lower level.
- 5. When the rear wheels are safely on the lower level, tilt the chair back to its balance point.

If you fail to heed these warnings damage to your chair, a fall, tip-over or loss of control may occur and cause severe injury to the rider or others.

# M. STAIRS 8

# **A**WARNING

- NEVER use this chair on stairs UNLESS you have someone to help you. Doing so is likely to cause a fall
  or tip-over.
- 2. Negotiating stairs with a wheelchair always requires at least 2 attendants for safety.

If you fail to heed these warnings damage to your chair, a fall, tip-over or loss of control may occur and cause severe injury to the rider or others.

# N. CLIMBING STAIRS 8

## **A**WARNING

- 1. Use at least two attendants to move a chair and rider up stairs.
- 2. Move the chair and rider BACKWARD up the stairs.
- 3. The person at the rear is in control. He or she tilts the chair back to its balance point.
- 4. A second attendant at the front firmly grasps a non-detachable part of the front frame and lifts the chair up and over one stair at a time.
- 5. The attendants move to the next stair up. Repeat for each stair, until you reach the landing.

If you fail to heed these warnings damage to your chair, a fall, tip-over or loss of control may occur and cause severe injury to the rider or others.

# O. DESCENDING STAIRS 8

# **A**WARNING

- I. Use at least two attendants to move a chair and rider down stairs.
- 2. Move the chair and rider FORWARD down the stairs.
- 3. The person at the rear is in control. He or she tilts the chair to the balance point of the rear wheels and rolls it to the edge of the top step.
- 4. A second attendant stands on the third step from the top and grasps the chair frame. He or she lowers the chair one step at a time by letting the rear wheels roll over the stair edge.
- 5. The attendants move to the next stair down. Repeat for each stair, until you reach the landing.

If you fail to heed these warnings damage to your chair, a fall, tip-over or loss of control may occur and cause severe injury to the rider or others.



#### A. ANTI-TIP TUBES

## **A**WARNING

Anti-tip tubes can help keep your chair from tipping over backward in normal conditions.

- I. Sunrise recommends the use of anti-tip tubes:
- 2. When locked in place (in the "down" position) anti-tip tubes should be BETWEEN 1 1/2 to 2 inches off the ground.
  - a. If set higher than 2 inches, they may not prevent a tip-over.
  - b. If set lower than 1 1/2 inches, they may "hang up" on obstacles and cause a fall or tip over.
- If you have to climb or descend a curb, or overcome an obstacle it may be necessary to have an attendant make sure the anti-tip tubes are rotated up, and out of the way, so that the chair and rider do not get stuck and/or become unstable.

If you fail to heed these warnings damage to your chair, a fall, tip-over or loss of control may occur and cause severe injury to the rider or others.

#### **B. ARMRESTS**

# **WARNING**

Armrests detach and will not bear the weight of this chair.

- NEVER lift this chair by its armrests. They may come loose or break
- 2. Lift this chair only by non-detachable parts of the main frame.

If you fail to heed these warnings damage to your chair, a fall, tip-over or loss of control may occur and cause severe injury to the rider or others.

#### C. CUSHIONS & SLING SEATS

## **A**WARNING

- Quickie sling seats and standard foam cushions are not designed for the relief of pressure.
- If you suffer from pressure sores or if you are at risk that they will occur, you may need a special seating system or a device to control your posture. Consult your doctor, nurse or therapist to find out if you need such a device for your well-being.
- Seat slings are not intended to be used as a direct seating surface. A cushion or other seating surface should be placed on the sling before use.

If you fail to heed these warnings damage to your chair, a fall, tip-over or loss of control may occur and cause severe injury to the rider or others.

#### D. FASTENERS

# **A**WARNING

Many of the screws, bolts and nuts on this chair are special high-strength fasteners. Use of improper fasteners may cause your chair to fail.

- ONLY use fasteners provided by an authorized supplier (or ones of the same type and strength, as indicated by the markings on the heads).
- Over- or under-tightened fasteners may fail or cause damage to chair parts.
- 3. If bolts or screws become loose, tighten them as soon as you can.

If you fail to heed these warnings damage to your chair, a fall, tip-over or loss of control may occur and cause severe injury to the rider or others.

#### E. FOOTRESTS

# **A**WARNING

- At the lowest point, footrests should be AT LEAST 2 inches off the ground. If set too LOW, they may "hang up" on obstacles you can expect to find in normal use. This may cause the chair to stop suddenly and tip forward.
- 2. To Avoid A Trip Or Fall When You Transfer:
  - Make sure your feet do not "hang up" or get caught in the space between the footrests.
  - Avoid putting weight on the footrests, as the chair may tip forward.
  - Footrests should be swung out of the way or removed whenever entering or exiting the wheelchair.
- NEVER lift this chair by the footrests. Footrests detach and will not bear the weight of this chair. Lift this chair only by non-detachable parts of the main frame.
- Never use the footrests of your chair to open doors, this may cause them to fail prematurely and create an unsafe situation.

If you fail to heed these warnings damage to your chair, a fall, tip-over or loss of control may occur and cause severe injury to the rider or others.

#### F. PNEUMATIC TIRES

# **A**WARNING

Proper inflation extends the life of your tires and makes your chair easier to use.

- Do not use this chair if any of the tires are under- or over-inflated. Check weekly for proper inflation level, as listed on the tire side-wall.
- Low pressure in a rear tire may cause the wheel lock on that side to slip and allow the wheel to turn when you do not expect it.
- Low pressure in any of the tires may cause the chair to veer to one side and result in a loss of control.
- 4. Over-inflated tires may burst.

If you fail to heed these warnings damage to your chair, a fall, tip-over or loss of control may occur and cause severe injury to the rider or others.

#### **Recommended Tire Pressures**

12

		Recomm Pressure or Ran	Pressure
Tires	GP Series	kPa	PSI
Pneumatic - 22"	х	448	65
Pneumatic - 24"	х	448	65
Pneumatic - 26"	х	448	65
High Pressure Clincher (24")	Х	758	110

# G. POSITIONING BELTS (Option) AWARNING

The positioning belt is predominately used to support your posture. It can also be used to limit slipping and/or sliding that you might experience when the chair is in motion. The positioning belt is not a transit rated safety belt and should not be used in the place of a seat belt while being transported in a motor vehicle. Improper use of Positioning belts may cause severe injury or death. If you use a positioning belt, be sure to follow the recommendations in this section:

- Make sure the rider does not slide down in the wheelchair seat. If this occurs, the rider may suffer chest compression or suffocate due to pressure from the belts.
- The belts must be snug, but must not be so tight that they interfere with breathing. You should be able to slide your open hand, flat, between the belt and the rider.
- A pelvic wedge or a similar device can help keep the rider from sliding down in the seat. Consult with the rider's doctor, nurse or therapist to find out if the rider needs such a device.
- Use positioning belts only with a rider who can cooperate. Make sure the rider can easily remove the belts in an emergency.
- 5. NEVER use positioning belts
  - a. As a patient restraint. A restraint requires a doctor's order.
  - b. On a rider who is comatose or agitated.
  - c. As a motor vehicle restraint. In an accident or sudden stop the rider may be thrown from the chair. Wheelchair positioning belts will not prevent this, and further injury may result from the belts or straps.

If you fail to heed these warnings, damage to your chair, a fall, tip-over or loss of control may occur and cause severe injury to the rider or others.

# H. PUSH HANDLES (Option)

# **A**WARNING

When you have an attendant, make sure that this chair has push handles.

- Push handles provide secure points for an attendant to hold the rear of this chair, to prevent a fall or tip-over.
- 2. Check to make sure push handle grips will not rotate or slip off. If you fail to heed these warnings damage to your chair, a fall, tip-over or loss of control may occur and cause severe injury to the rider or others.

### I. QUICK-RELEASE AXLES

# **A**WARNING

- Do not use this chair UNLESS you are sure that both quick-release rear axles are locked.
- 2. An axle is not locked until the quick-release button pops out fully.
- An unlocked axle may come off during use, resulting in a fall, tipover or loss of control and cause severe injury to the rider or others.
  - Quick-Release Axles should be periodically cleaned and inspected for function and signs of wear or bending. Replace as necessary.

If you fail to heed these warnings damage to your chair, a fall, tip-over or loss of control may occur and cause severe injury to the rider or others.

#### J. REAR WHEELS

# **A**WARNING

A change in set-up of the rear wheels will affect the center of balance of your chair.

- The farther you move the rear axles FORWARD, the more likely it is that your chair will tip over backward.
- Consult your healthcare advisor to find the best rear axle set-up for your chair. Do not change the set-up UNLESS you consult your healthcare advisor first.
- Adjust the rear wheel locks after you make any change to the rear axles.
  - a. If you fail to do so, the wheel locks may not work.
  - Make sure lock arms embed in the tires at least 1/8 inch when locked

If you fail to heed these warnings damage to your chair, a fall, tip-over or loss of control may occur and cause severe injury to the rider or others.

#### K. REAR WHEEL LOCKS

## **A**WARNING

Rear wheel locks are NOT designed to slow or stop a moving wheelchair. Use them only to keep the rear wheels from rolling when your chair is at a complete stop.

- NEVER use rear wheel locks to try to slow or stop your chair when it is moving. Doing so may cause a fall or tip-over
- To keep the rear wheels from rolling, always set both rear wheel locks when you transfer to or from your chair.
- Low pressure in a rear tire may cause the wheel lock on that side to slip and may allow the wheel to turn when you do not expect it.
- Make sure lock arms embed in tires at least 1/8 inch when locked. If you fail to do so, the locks may not work.

If you fail to heed these warnings damage to your chair, a fall, tip-over or loss of control may occur and cause severe injury to the rider or others.

#### L. MODIFIED SEAT SYSTEMS

# **A**WARNING

Use of a seat system not approved by Sunrise may alter the center of balance of this chair. This may cause the chair to tip over.

- Do not change the seat system of your chair UNLESS you consult your authorized supplier first.
- Use of a seating system not approved by Sunrise may affect the backrest folding mechanism of this chair.
- Use of a seating system not provided by Sunrise is prohibited for transit use.

If you fail to heed these warnings damage to your chair, a fall, tip-over or loss of control may occur and cause severe injury to the rider or others.

# M. SEAT AND BACK UPHOLSTERY AWARNING

- Replace worn or torn fabric of seat and seat back as soon as you can. If you fail to do so, the seat or seat back may fail.
- Sling fabric will weaken with age and use. Look for fraying, thin spots, or stretching of fabrics especially at edges and seams.
- "Dropping down" into your chair will weaken fabric and result in the need to inspect and replace the seat more often.
- 4. Be aware that laundering or excess moisture will reduce the flame retardation qualities of the fabric.
- If Tension Adjustable upholstery is present, loosen straps or remove upholstery prior to folding or unfolding the chair.

If you fail to heed these warnings damage to your chair, a fall, tip-over or loss of control may occur and cause severe injury to the rider or others.

#### **N.BACKREST TENSION ADJUSTABLE**

The Tension Adjustable Backrest is a versatile back intended to replace standard wheelchair back upholstery. It is designed to provide simple, comfortable and effective support to help maximize function and increase seating tolerance. In addition, it is lightweight, durable, and easy to use.

Sunrise Medical recommends that a clinician such as a doctor or therapist experienced in seating and positioning be consulted to determine if the Backrest Tension Adjustable is appropriate. Backs systems should only be installed by an authorized Sunrise Medical supplier.

#### **A** WARNING

Installing a back support on a wheelchair may affect the center of gravity of the wheelchair and may cause the wheelchair to tip backwards potentially resulting in injury.

Always assess for the potential need for anti-tippers to be added to the wheelchair to help increase the stability.

# **A** WARNING

Do not use the Backrest Tension Adjustable to push or lift the wheelchair. Improper use may cause the back to unexpectedly detach from the wheelchair.

If you fail to heed these warnings damage to your chair, a fall, tip-over or loss of control may occur and cause severe injury to the rider or others.

# **A** WARNING

Do not use the Freestyle Adjustable backrest to push or lift the wheel-chair. Improper use may cause the back to unexpectedly detach from the

If you fail to heed these warnings damage to your chair, a fall, tip-over or loss of control may occur and cause severe injury to the rider or others.

# O. FOLDING LOCK DOWN ANGLE ADJUSTABLE BACKREST

# **A** WARNING

Only adjust backrest angle when in a safe and stable position. You may increase the likelihood of tipping or instability.

If you fail to heed these warnings damage to your chair, a fall, tip-over or loss of control may occur and cause severe injury to the rider or others.

#### P. CASTER PIN LOCKS

# **A**WARNING

Always use both pin locks when transferring in and out of the chair.

Caster pin locks only keep the front caster wheels from changing direction, they do not lock-out the front wheels from rotation. To prevent the wheel-chair from rolling, you must engage the rear wheel locks.

If you propel your wheelchair with the caster pin locks engaged, the chair will be prevented from turning.

If you fail to heed these warnings damage to your chair, a fall, tip-over or loss of control may occur and cause severe injury to the rider or others.

# **A**WARNING

The owner of this chair is responsible for making sure that it has been set up and adjusted by a trained service professional under the advice of a healthcare professional. The chair may require periodic safety and function checks or certain tool-free adjustments that can be performed by the owner, caregiver or authorized dealer if desired. Always use parts and/or accessories that have been recommended or approved by Sunrise Medical when servicing this chair.

#### A. INTRODUCTION

- Proper maintenance will improve performance and extend the useful life of your chair.
- Clean your chair regularly. This will help you find loose or worn parts and make your chair easier to use. You will need a mild detergent solution and plenty of cleaning rags.
- 3. If discovered, have loose, worn, bent or damaged parts replaced **before using the chair**.
- To protect your investment, have all major maintenance and repair work done by your authorized dealer.
- 5. Inspect and maintain this chair strictly per the safety checklist.
- If you detect a problem, make sure to order parts, or have service, and repair work done at your authorized dealer before use.
- At least once per year, have a complete inspection, safety check, and service of your chair made by an authorized dealer.

#### **B. CRITICAL SAFETY CHECKS**

#### I. Tire Air Pressure:

Check air pressure in pneumatic tires at least **ONCE PER WEEK**. The wheel locks will not grip properly if you fail to maintain the air pressure shown on tire sidewall.

#### Axles & Axle Sleeves:

When checking axles and axle sleeves every six months, make sure they are clean and tight. Loose sleeves will damage the axle plate and will affect performance.

#### 3. Camber Tubes and Camber Plugs

Inspect the camber tubes and plugs every 6 months ensuring that all fasteners are tight and that no parts have moved from their preset positions.

#### C. CLEANING

#### 1. Paint Finish

- Clean the painted surfaces with mild soap or detergent at least once a month.
- Protect the paint with a coat of non-abrasive auto wax every three months.

#### 2. Axles and Moving Parts

- Clean around axles and moving parts WEEKLY with a slightly damp (not wet) cloth.
- Wipe off or blow away any fluff, dust or dirt on axles or moving parts.

#### 3. Upholstery

- a. Hand-wash (machine washing may damage fabric).
- b. Drip-dry only. DO NOT machine dry as heat will damage fabric.

#### 4. Basic Maintenance Materials available at local store

- a. Tire pump
- b. Tire pressure gauge
- c. Clean rags or cotton cloth.
- d. Teflon-based lubricant
- e Mild detergent.

NOTE - You do not need to grease or oil the chair.

#### D. SAFETY CHECKLIST

Weekly	3 Months	6 Months	Annually	Safety & Function Check
<b>V</b>				Tire inflation level
				Wheel locks
				Visually check for loose hardware
		V		Armrests
		<b>V</b>		Axle and axle sleeves
	✓			Quick-release axles
	<b>V</b>			Wheels, tires and spokes
	✓			Casters
	<b>V</b>			Anti-tip tubes
		V		Frame, Camber tubes, and Crossbrace
	<b>V</b>			Upholstery
			<b>V</b>	Service by Authorized Dealer

**NOTE** - The user or caregiver should perform these weekly and monthly checks to maintain the safety of their chair. If an item is not working properly, please contact your authorized dealer.

#### E. TROUBLESHOOTING CHART

15

	Left turn in chair	Right turn in chair	Looseness in chair	Sluggish turning	Squeaks and rattles	Caster flutter	Solution
	<b>\</b>		$\checkmark$	<b>V</b>			Make sure tire pressure is correct and equal in both rear tires and front caster tires, if pneumatic.
			<b>V</b>	<b>V</b>	<b>V</b>	<b>V</b>	Make sure all nuts and bolts are tight.
			<b>V</b>		<b>V</b>		Make sure all spokes and nipples are tight on radial spoke wheels.
					<b>V</b>		Use Tri-Flow Lubricant (Teflon®-based) between frame connections and parts.
	V	<b>V</b>		V		<b>V</b>	Check for proper caster fork adjustment. See instructions for caster fork adjustment.

# F. TO MOUNT & REMOVE REAR WHEELS 9 0

# WHEELS LIE

Do not use this chair UNLESS you are sure both quick-release axles are locked. An unlocked axle may come off during use and cause a fall.

NOTE - Setting the wheelchair on a flat surface, such as a workbench or table, helps make these procedures

#### I. To Install Wheel

- a. Depress quick-release button (A) fully.
- b. Insert axle (B) through hub of rear wheel.
- c. Keep button (A) depressed as you slide axle (B) into axle sleeve (C).
- Release button to lock axle in axle sleeve. Adjust axle if it does not lock.
   See Section B.
- e. Repeat steps on other side.

#### 2. To Remove Wheel

- a. Depress quick-release button (A) fully.
- b. Remove wheel by sliding axle (B) completely out of axle sleeve (C).
- c. Repeat steps on other side.

**NOTE**— The axle is not locked until the quick-release button pops out fully (A). Check that the axle is locked by pulling on the wheel in the direction of the axle.

#### G. WHEEL LOCKS

# **A**WARNING

Wheel locks are installed at Sunrise and should be adjusted by your qualified service person.

Inspect wheel locks weekly per the maintenance chart. Do not use your chair UNLESS you are sure both wheel-locks can fully engage. A wheel-lock that is not correctly adjusted may allow your chair to roll, or turn unexpectedly.

Wheel-locks must be adjusted after making sure the tires have the correct air pressure. When fully engaged, the arm (D) should be imbedded into the tire at least 1/8" to be effective.

If you find the wheel locks have slipped or are not working correctly contact your service provider for proper adjustment.

# H. ANTI-TIPS 12

Sunrise Medical recommends anti-tip tubes for all wheelchairs.

#### I. Inserting Anti-tip Tubes Into Receiver

- Press the rear anti-tip release button (I) on the anti-tip tube so that both release pins are drawn inside.
- b. Insert the anti-tip tube (E) into the anti-tip receiver (F).
- c. Turn the anti-tip tube down until release pin is through the receiver mounting hole.
- d. Insert second anti-tip tube the same way.


#### 2. Adjusting Anti-Tip Tube Wheel


The anti-tip wheels may have to be raised or lowered to achieve proper clearance of I I/2" to 2".


Press the anti-tip wheel release button (G) so that both release pins are drawn inside. Raise or lower to one of the three predrilled holes (H). Release button. Adjust the second anti-tip tube wheel the same way. Both wheels should be the same height.


#### 3. Turning Anti-Tip Tubes Up

Turn anti-tip tubes up when being pushed by attendant, overcoming obstacles or climbing curbs. Press the rear anti-tip tube release button (1). Hold lever in and turn anti-tip tube up. Release the lever and repeat with second anti-tip tube. Remember to return anti-tip tubes to down position after completing maneuver.

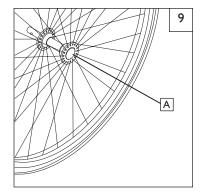

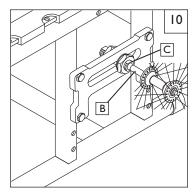

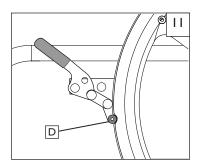

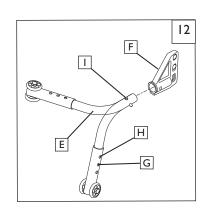

# I. SINGLE POST HEIGHT-ADJUSTABLE ARMRESTS (Option)

#### I. Installation

- a) Slide the outer armpost into the receiver mounted to the wheelchair frame.
- b) The armrest will automatically lock into place.

#### 2. Height Adjustment

- a) Rotate release lever to second stop.
- b) Slide armrest pad up or down to desired height.
- c) Return lever to locked position against armpost.
- d) Push arm pad until upper armpost locks firmly into place.

#### 3. Removing Armrest

a) Rotate release lever to first stop and remove the armrest.

#### 4. Replacing Armrest

- a) Slide armrest back into receiver.
- b) Return release lever to locked position against armpost.

#### 5. Adjusting Armrest Receiver Fit

To tighten or loosen the fit of the outer armpost in the receiver:

- a) Loosen the four bolts on the sides of the receiver.
- b) With the armrest in the receiver, squeeze the receiver to achieve the desired fit.
- c) Tighten the four bolts.

#### 6. Adjusting Inner Armpost Fit

- a) Two set screws are installed in the outer armpost.
- b) Turn the set screws in or out until the desired fit is achieved.

# J. PADDED SWING-AWAY ARMRESTS (Option)

# 14

17

#### I. Installation

- a. The armrest height is determined by the adjustment bolt (A) position.
- b. Slide the armrest into the receiver tube (B) on rear of frame until the adjustment bolt is securely seated (locked) in the receiver tube slot.

#### 2. Swinging Away


a. Lift armrest out of the locked position and rotate to the side

#### 3. Removing Armrest


a. Pull armrest straight out of the receiver.


# K. PLATFORM FLIP-UP FOOTPLATE 15

The footplate (C) can be rotated up towards the user for transfers and adjustment.

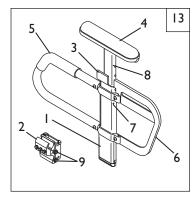

- 1. Outer armpost
- 2. Standard receiver
- 3. Release lever
- 4. Armrest pad
- 5. Transfer bar
- 6. Side panel
- Outer armpost tension adjustment set screws
- 8. Inner armpost
- 9. Receiver adjustment bolts

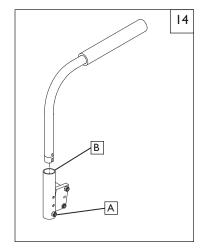

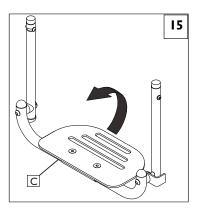

#### L. SWING AWAY IN/OUT HANGERS AND FOOTRESTS (GPSA pnly)

Make sure that your Sunrise dealer has correctly adjusted your footrests and/or legrests with the advice of a healthcare professional. The original setup should not be changed without first checking with that advisor. The footrest position is key to keeping your body in the proper alignment, and providing a stable support for your legs and torso. Legrests and footrests should be swung out of the way, or removed for transfers.

Swing-in-Swing-out Hangers and Footrests (60°, 70°, 90°)

#### 1. Installation

- a. Place swing-in/swing-out pivot saddle into the receiver (A) on front frame tube with the footrest facing inward or outward from the frame.
- b. Rotate the footrest inward until it locks into place on locking plate.

#### 2. Removal

- a. To remove footrest, release latch (B) by pulling lever upward or pushing lever downward.
- b. Rotate footrest inward or outward and lift.

# 3. ALR Installation or Removal

To install or remove Articulating Legrest (ALR) see instructions for Swing-away Footrest installation.

#### 4. Elevation Adjustment


- a. To raise legrest, lift to desired position. Legrest will automatically lock in place.
- b. To lower legrest, while seated in chair, press release lever (C) down and lower Legrest to desired position. Legrest will automatically lock in place.


## 5. ELR Installation or Removal 18


To install or remove Elevating Legrest (ELR) see instructions for Swing-away Footrest installation.

#### 6. Elevation Adjustment

- a. To raise legrest, lift to desired position. Legrest will automatically lock in place.
- b. To lower legrest, while seated in chair, press release lever (D) down and lower legrest to desired position. Legrest will automatically lock in place.

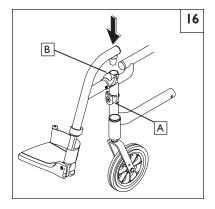

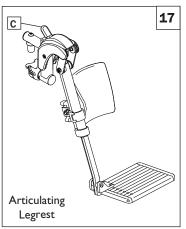

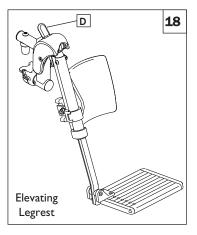

#### M. CUSHION INSTALLATION

Place cushion on seat sling with Velcro® side down. The beveled edge of the cushion should be in front. Press firmly into place.

18

# N. SIDE GUARD 19

#### Inserting and Removing the Side Guard

- a. Insert the Side Guard into Side Guard outer receiver hardware
- b. To Remove, grip the top of the Side Guard and pull upward.

**NOTE** – After installing receiver hardware and inserting the side guard, check for interference. Don't operate the wheelchair if the sideguard interferes with any of the other components.

# 19

#### O. STORAGE TIPS

- 1. Store your chair in a clean, dry area. If you fail to do so, parts may rust or corrode.
- 2. Before using your chair, make sure it is in proper working order.
- 3. Inspect and service all items on the "Safety checklist".
- 4. If stored for more than three months, have your chair inspected by an authorized dealer before use.

#### P. INSPECT

After the wheelchair is assembled and adjusted, it should roll smoothly and easily. All accessories should also perform smoothly. If you have any problems, follow these procedures:

- Review the set-up and check-out sections and operating guide to make sure chair was properly prepared.
- 2. Review the troubleshooting chart at the beginning of this section.
- 3. If your problem persists, contact your authorized dealer. If you still have a problem after contacting your authorized dealer, contact Sunrise customer service. See the Introduction Page for details on how to con-tact your authorized dealer or Sunrise customer service.

# **A**WARNING

The owner of this chair is responsible for making sure that it has been setup and adjusted by a trained service professional under the advice of a healthcare professional. Service and/or adjustments that require the use of tools, should only be done by an authorized supplier under the advice of a healthcare professional. Always use parts and/or accessories that have been recommended and approved by Sunrise Medical when servicing this chair

# A. DEALER SERVICE INTRODUCTION

- At least once per year, this chair should have a complete inspection, safety check, and regular service
  made by an authorized dealer. The tool list at right is a good starting point for proper maintenance.
- 2. If you have discovered a worn, bent, or damaged part, repair or replace them with recommended parts before returning this chair to service.
- 3 All major maintenance and repair work should be done by the authorized dealer.

#### **B. CRITICAL MAINTENANCE TIPS**

#### I. Torque settings:

A torque setting is the optimum tightening which should be made on a particular fastener. It is important to use proper torque settings where specified. When not specified, torque settings should be 60 in-lbs

#### 2. Dealer Service and Adjustment Reference materials:

Go to www.sunrisemedical.com for parts manuals, instruction sheets, and instructional videos that will aid in the repair of your Quickie wheelchair.

#### C. CLEANING

#### I. Paint Finish

- a. Clean the painted surfaces with mild soap or detergent.
- b. Protect the paint with a coat of non-abrasive auto wax.

#### 2. Axles and Moving Parts

- a. Clean around axles and moving parts with a slightly damp (not wet) cloth.
- b. Wipe off or blow away any fluff, dust or dirt on axles or moving parts.
- c. DO NOT USE 3-in-ONE oil, or WD-40<sup>®</sup> for lubrication. Only use Teflon based Lubricant when working on this wheelchair.

# D. REAR WHEEL AXLE NUT ADJUSTMENT

The rear wheel axle (B) attaches the rear wheel to the Axle sleeve (C). When the detent balls (D) engage into the axle sleeve the rear wheel effectively becomes locked onto the chair. Pushing the quick-release button (A) disengages the detent balls and allows removal of the axle and wheel assembly.

To adjust the axle you will need a 3/4" wrench to turn the adjustment nut (E). You will also need a 1/2" wrench to securely hold the ball detent end of the axle to prevent it from turning.

If the wheel is locked on the chair but there is excessive wheel play (the wheel hub can be pushed back and forth on the axle) then adjust the nut clockwise until there is no perceptible gap between the wheel and camber tube and the axle is securely locked onto the chair.

#### E. REAR AXLES

22 23 24 25

The most important adjustment on your Quickie wheelchair is the position of the rear axle. The center of Gravity, Wheel camber and Wheelbase are all determined by the axle adjustment.

#### I. Center of Gravity

Moving the center of gravity to the front will lighten the force required to turn the chair. The further back the axle, the more stable the chair becomes. The center of gravity is adjusted by moving the rear axle (C) forward or backward on the axle plate(F). Moving the axle forward will increase your turning speed and lighten the front end.


#### 2. Wheel Camber


The wheel camber adjustment provides greater side-to-side stability due to the increased width and angle of the wheelbase. The wheel camber adjustment also allows for quicker turning and greater access to the top of the handrims. Wheel camber is preset at the factory at  $7^{\circ}$ . More or less camber can be obtained by increasing or decreasing the number of camber washers (G) located between the axle plates and the frame.




#### TOOLS YOU WILL NEED

- I. Imperial Hex key set
- 2. Metric Hex key set
- 3. Imperial Open-end Wrench set
- 4. Metric Open-end Wrench set
- 5. Torque wrench
- 6. Imperial Hex bit Socket set
- 7. Metric Hex bit Socket set
- 8. Phillips and Flat screwdrivers
- 9. Tire Pressure Gauge

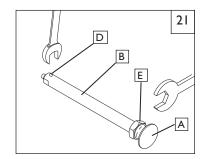

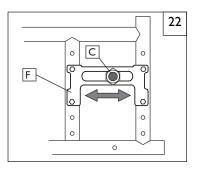

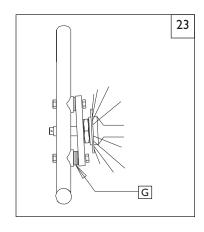

#### 3. Wheel base width adjustment


- a) Loosen two axle nuts (A).
- b) Reposition the axle sleeve (B) in the desired slot.
- c) Retighten nuts.
- d) Adjustment must be exactly the same on both sides of the wheelchair.


**NOTE:** To achieve the narrowest chair possible, axle plates can be mounted on inside frame tubes. It may be necessary to re-adjust the axle sleeves.

#### 4. Seat height adjustment

- a) Remove axle plate bolts (C).
- b) Move the axle plate vertically inthe predrilled frame holes to the desired position.
- c) Reinsert bolts in frame and tighten.
- d) Repeat on the other side of chair. Adjustment must be exactly the same on both sides of the chair.

NOTE: A front caster adjustment should be made to correspond with any change in seat height.

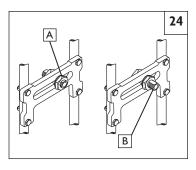

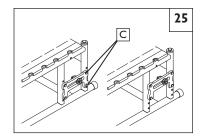

# F. WHEEL LOCKS

Wheel locks are installed at the factory unless you have requested otherwise.

Use a torque setting of 100 in.-lbs. when setting up wheel locks.

#### I. High-Mount Scissor Wheel Locks


- a) Loosen the clamp hardware(D).
- b) Slide assembly toward rear wheel until clamp embeds into tire to prevent wheel movement, when in locked position.
- c) Adjust angle position.
- d) Tighten the hardware.


#### 2. Low-mount Wheel Locks

- a) Loosen the screws on the top of each clamp (E).
- b) Slide assembly toward rear wheel until clamp embeds into tire to prevent wheel movement, when in locked position.
- c) Adjust angle position.
- d) Tighten screws.

#### 3. High-mount Push-to-Lock or Pull-to-Lock Wheel Locks

- a) Loosen the screws on the top of each clamp.
- b) Using a 3/16" Allen wrench, turn one of the screws counterclockwise one-quarter turn.
- c) Repeat the same process with the second of the two screws.
- d) Alternately loosen the screws (two turns each) until both screws are removed.
- e) Slide clamp toward the rear wheel until the wheel lock is embedded into the tire to prevent wheel movement, when in the locked position.
- f) Tighten the screws.

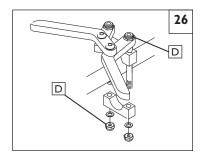

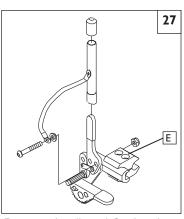

Extension handle and Grade aid


# G. ANTI-TIP RECEIVERS

Sunrise Medical recommends anti-tip tubes for all wheelchairs.

Use a torque setting of 115 in.-lbs. when setting up the anti-tip tubes.

#### 2. Adjusting Anti-Tip Receiver

- a. Remove anti-tip tubes from anti-tip receivers.
- b. Remove hardware (F) from anti-tip tube receiver.
- c. Reposition bracket to desired height.
- d. Reinsert bolts and tighten.
- e. Repeat with second anti-tip tube receiver. Both brackets should be at exactly the same height.
- f. Replace anti-tip tubes.

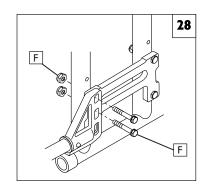

# H SINGLE-POST ARMREST RECEIVER

#### I. Mounting the receiver

- a. Place the two receiver clamps (A) onto the top portion of the rear side frame tube. Align with the preferred location of the single post height-adjustable armrest.
- Pinch both clamp receivers together at the armpost receiver side and insert the 3 hex bolts
   (B) into the armpost receiver.
- c. Once inserted, hold both clamp receivers against the top portion of the rear side frame tube and tighten the hardware (B).

# 1. Adjusting Armrest Receiver Fit 30

To tighten or loosen the fit of the outer armpost in the receiver:

- a. Loosen the bolts on the sides of the receiver (C).
- b. With he armrest assembly (D) in the receiver (E), press firmly on the outside of the receiver.
- c. Maintain pressure on the receiver and re-tighten two of the hex bolts (C).
- d. Remove the armrest assembly and re-tighten the remaining two hex bolts (C).
- e. The armrest will fit firmly in the receiver and lessen any noise that may result from vibration.


#### 2. Moving the receiver Location


- a. Loosen the 3 bolts (B) holding the clamp halves(A) together (do not remove them)
- b. Slide the clamp so that armrest is at the correct position.
- c. Tighten the 3 bolts (B).


# I. PADDED SWING-AWAY ARMREST RECEIVER 31

Swing-away armrests can be detached or can swing away to allow lateral transfers. They are height adjustable (I" increments) by moving hardware (D) up or down in predrilled holes on armrest bracket..

- a. Additional height can be achieved by removing hardware (E) and flipping the hardware.
- b. Tighten hardware (E). Use a torque setting of 144 in-lbs (16.27 Nm).

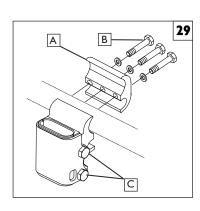

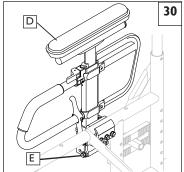

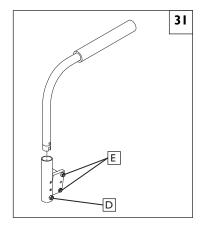

# J. SWING-AWAY FOOTREST HEIGHT ADJUSTMENT (GPSA)

#### Height Adjustment

NOTE— It is recommended that you maintain a minimum of 2.0 inches between the lowest point on the footrest and the floor.


- a. Loosen set screw (F) using a 3/16 inch hex key.
- b. Slide footrest extension (G) up or down inside frame tube to desired height.
- c. Tighten set screw (F). Use a torque setting of 144 in-lbs (16.27 Nm).

# G F

# K. FIXED FRONT FOOTRESTS (GP,GPV) 33

#### I. Adjustment

- a. Remove mounting bolts (A) on the top of each extension tube.
- b. Make sure the inserts remain in place.
- c. Slide footrest tube into front frame tube to desired height.
- Line up holes and replace the bolt on the outside through frame, footrest and insert.
- e. Follow same procedure on opposite side.
- f. Align footrests to desired inward/outward rotational position and tighten firmly.

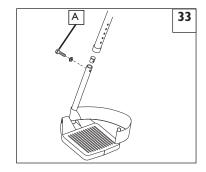

# L. ANGLE ADJUSTABLE FOOTPLATES 34

#### I. Aluminum Angle Adjustable Footplate


- Loosen screws (B) that attach the footplate to the angle adjustment bracket found under the footplate (not visible in illustration).
- b. Adjust footplate (B) to desired angular position.
- c. Re-tighten bolt (B).

# C B

# M. PLATFORM FLIP-UP FOOTPLATE 35

#### I. Height Adjustment

- a. Loosen screws (D) that attach the round extension tubes(E) to the Fixed front Frame of the
- b. Adjust footplate assembly to desired height.
- c. Re-tighten the hardware.

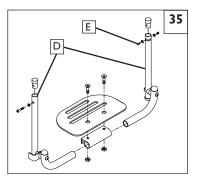


# N. ARTICULATING LEGREST 36

#### I. Height Adjustment of the Calf Pad

- a. Loosen the retaining nut (E) located at the back of the calf pad bracket assembly.
- b. Slide the calf pad bracket assembly up or down.
- c. Tighten the retaining nut (E) once the pad is in the desired position.

#### Height Adjustment with Extension Tube

a. (See "Swing-away Height Adjustment" Section J)

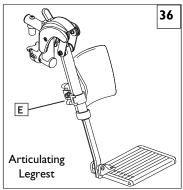


# O. ELEVATING LEGREST 37

#### I. Height Adjustment of the Calf Pad

- a. Loosen the retaining nut (F) located at the back of the calf pad bracket assembly.
- b. Slide the calf pad bracket assembly up or down.
- c. Tighten the retaining nut (F) once the pad is in the desired position.

#### 2. Height Adjustment with Extension Tube

a. (See "Swing-away Height Adjustment" Section J)

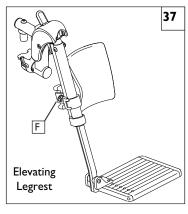


# P. CASTER FORKS 38

NOTE- Two-hole caster forks allow interchanging 5" and 6" casters and adjusting seat height.

#### I. Caster Fork Adjustment

- a) Loosen the bolt (C) and remove the caster.
- b) Either change caster size and/or position caster upward or downward in predrilled holes (I inch apart) on caster fork.
- c) Replace bolt and tighten securely. Use a torque setting of 75 in-lbs.

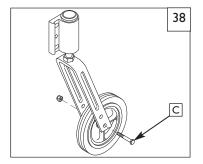

39

#### Q. CASTERS

Use a torque setting of 75 in-lbs. when adjusting the casters.

# 1. Caster Angle Adjustment 39


For optimum performance, the caster housing should always be at a 90° angle to the floor (perpendicular to the ground). This adjustment is made with an eccentric (offset) attachment bolt mechanism.

- To change the angle, place the chair on a flat surface (such as a table).
- Remove the bolt and nuts from the back side of the caster plate. The caster plate is slotted at the top and bottom for adjustment.
- Place a large right triangle against the table surface and the front surface of the caster bearing housing.
- d. This will align the caster stem rotational axis perpendicular to the floor surface.
- e. Rotate the bolts independently until they fall into position.
- When the alignment is correct, retighten the two retaining bolts.
- Repeat the process for the other caster.

## 2. Caster Reversibility (GPSA) 40

The caster housing is generally mounted in a forward-facing position. If additional footrest clearance is necessary, the caster housing can be reversed. This will position the caster housing rearward to allow more clearance.

- a. To reverse the caster housing, the left housing should be mounted on the right side of the frame.
- b. The right housing should be mounted on the left side of the frame.

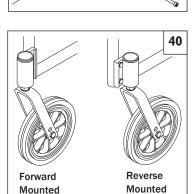



# I. Moving caster housing (GP, GPV)

- a) Remove the two bolts (A).
- b) Remove safety cotter and clevis pin (B).
- c) Slide caster plate forward or rearward and insert clevis pin into one of three pre-drilled frame holes.
- Reinsert and tighten the bolts (A).
- e) Replace safety cotter.
- f) Repeat process for the other side.

# 2. Reverse Mounted (GP,GPV) 42

- To reverse the caster housing, the left housing should be mounted on the right side of the
- b) The right housing should be mounted on the left side of the frame.

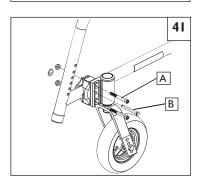

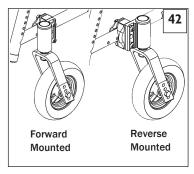

# R. BACKREST TENSION ADJUSTABLE 43 44 45

#### I. To install the Backrest Tension Adjustable

- a. Slide Velcro straps (A) over the backrest frame (B)section. Make sure to include at least one strap below the towel bar (if using a rigid chair).
- b. Tighten the straps appropriately to desired tension level. DO NOT overtighten straps as this will cause undue strain upon the chair backrest frame (B).
- c. If using inegral push handles (C), slide straps from bottom of backrest upward.
- d. Install backrest cover at desired level and fold over rear of Velcro strapping system (D). The Quickie patch should be upright on the rear of the chair.
- e. Finish installation by placing vanity flap (center panel) down onto Velcro on the seat sling to secure attachment (E).


#### 2. Adjusting the Backrest Tension Adjustable


Suggest using anti tips while making any adjustments. Ensure anti tips are safely secured and in a position to prevent the wheelchair from tipping backwards.


- a. User can transfer into the wheelchair. Place wheel locks in the locked position
- b. From the rear of the wheelchair the attendant can lift the Vanity Flap (Center panel) to access the strap system. Adjust straps for optimal balance and truck alignment. Ensure the Velcro straps has a minimum of 2"s of engagement, hook securing to loop. Press the Velcro together to ensure it's securely engaged.
- c. Once adjustments have been finalized replaced Vanity Flap to its original position.

# **A** WARNING

Any changes made to the straps will affect the center of gravity. Suggest the user has the attendant stationed behind the wheelchair to prevent the wheelchair from tipping backwards while they become accustomed to the adjustment.

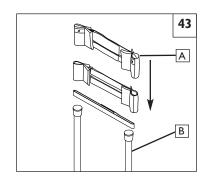

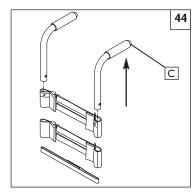

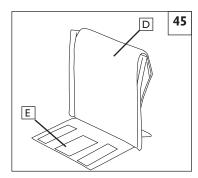

# S. BACKREST 46 47

#### I. Height Adjustment


The backrest comes standard with a 4" height adjustment.


- a) Remove the backrest upholstery from the frame.
- b) You will see the backrest tube which telescopes into the frame and is secured by hardware (F) on the side of the frame.
- c) There are four holes, I inch apart, you may choose from to set the back height.
- d) After selecting the proper height, slide the backrest upholstery back on with the overlap portion unattached.
- e) Secure VELCRO® style material on side tubes and attach the excess overlap.

#### 2. Back angle adjustment (Folding Backrest)

An  $8^{\circ}$  (+/-  $5^{\circ}$ ) angle adjustment is standard on this Quickie wheelchair.

- Turning the eccentric bolt (G) on the backrest hinge plate will increase or decrease the back angle.
- b) The adjustment on each side of the chair must be exactly equal.

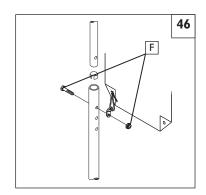


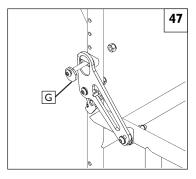

# T. SIDEGUARD HARDWARE

Installation of sideguard hardware

- a. Position outer receiver hardware (A) on frame.
- b. On corresponding inside of the frame position inner clamping hardware (B)
- c. Insert two bolts (C) with washer and tighten using 3/16 inch hex key
- d. Your sideguard (D) can now be inserted into the receiver.

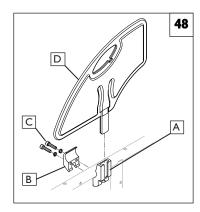


# U. SEAT SLING 49

#### I. Adjustment

The seat sling can be adjusted using VELCRO® -style retaining material beneath the seat.

- a) Remove the screws (E) retaining the left side seat sling.
- b) Re-adjust Velcro® style material to increase the tension in the seat sling.
- c) Replace screws.
- d) If there is any difficulty in reattaching the screws, try using a probe to help line up the holes.

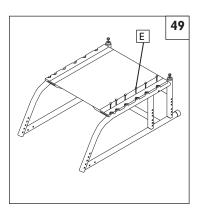

QUICKIE GP SERIES NOTES

#### A. FOR LIFETIME

Frame and cross-brace (if applicable) warranty:

- Although the anticipated useful service time of this wheelchair is five years, Sunrise Medical guarantees the frame and cross brace against defects in material and workmanship for life or for as long as the original purchaser owns the chair.
- 2. This warranty does not apply if:
  - a. The chair is subject to abuse
  - The chair is not maintained as recommended in the owner's manual
  - c. The chair is transferred to a different person from the original owner

#### B. FOR ONE (I) YEAR

We warrant all Sunrise Medical parts and components of this wheelchair against defects in materials and workmanship for one year from the date of first consumer purchase.

#### Backrest Tension Adjustable (Balistic & 3DX Vented)

Each Backrest Tension Adjustable is carefully inspected and tested to provide peak performance. Every Backrest Tension Adjustable is guaranteed to be free from defects in materials and workmanship for a period of twelve (12) months from the date of purchase provided normal use. Should a defect in materials or workmanship occur within twelve months from the original date of purchase, Sunrise Medical will, at its option, repair or replace it without charge. This warranty does not apply to puncture, tears or burns. Claims and repairs should be processed through the nearest authorized supplier. Except for express warranties made herein, all other warranties including implied warranties of merchantability and warranties of fitness for particular purpose are excluded. There are not warranties which extend beyond the description of the face hereof. Remedies for breach of express warranties herein are limited to repair of replacement of the goods. In no event shall damages for breach of any warranty include any consequential damages or exceed the cost of nonconforming goods sold.

#### C. LIMITATIONS

- I. We do not warrant:
  - a. Tires and tubes, upholstery, pads and push-handle grips.
  - Damage from neglect, accident, misuse, or from improper installation or repair.
  - Products modified without Sunrise Medicals express written consent.
  - d. Damage from exceeding the weight limit.
- 2. This warranty is VOID if the original chair serial number tag is removed or altered.
- This warranty applies in the USA and CANADA only. Check with your supplier to find out if international warranties apply.
- This warranty is not transferable and only applies to the first consumer purchase of this wheelchair through an authorized Sunrise Medical dealer.

#### D. WHAT WE WILL DO

Our sole liability is to repair or replace covered parts. This is the exclusive remedy for consequential damages.

#### E. WHAT YOU MUST DO

- Obtain from an authorized supplier, while this warranty is in effect, prior approval for return or repair of covered parts.
- 2. Return the wheelchair or part(s), freight pre-paid to the designated Sunrise Medical location.
- 3. Pay the cost of labor to repair, remove or install parts.

#### F. NOTICE TO CONSUMER

- 1. If allowed by law, this warranty is in place of any other warranty (written or oral, express or implied, including a warranty of merchantability, or fitness for a particular purpose).
- 2. This warranty gives you certain legal rights. You may also have other rights that vary from state to state.

#### G. ADDITIONAL WARRANTY INFORMATION

For goods provided by Sunrise Medical Pty Ltd in Australia, our goods come with a guarantee by Sunrise Medical that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably forseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits to you given by this warranty are in addition to your other rights and remedies under a law in relation to the goods to which the warranty relates.

Record your serial number here for future reference:

Sunrise Medical S.r.l. Via Riva, 20 – Montale 29122 Piacenza Italia Tel: +39 0523 573111

Tel.: +39 0523 573111 www.SunriseMedical.it

Sunrise Medical AG Erlenauweg 17 CH-3110 Münsingen Schweiz/Suisse/Svizzera Tel +41 (0)31 958 3838 www.SunriseMedical.ch

Sunrise Medical AS
Delitoppen 3
1540 Vestby
Norge
Telefon: +47 66 96 38 00
post@sunrisemedical.no
www.SunriseMedical.no

Sunrise Medical AB Neongatan 5 431 53 Mölndal Sweden Tel.: +46 (0)31 748 37 00 post@sunrisemedical.se www.SunriseMedical.se

MEDICCO s.r.o. H – Park, Heršpická 1013/11d, 639 00 Brno Czech Republic Tel.: (+420) 547 250 955 Fax: (+420) 547 250 956 www.medicco.cz info@medicco.cz Bezplatná linka 800 900 809

Sunrise Medical Aps Mårkærvej 5-9 2630 Taastrup Denmark +45 70 22 43 49 info@sunrisemedical.dk www.SunriseMedical.dk

Sunrise Medical Australia
11 Daniel Street
Wetherill Park NSW 2164
Australia
Ph: +61 2 9678 6600
Email: enquiries@sunrisemedical.com.au
www.SunriseMedical.com.au

Sunrise Medical (US) LLC North American Headquarters 12002 Volunteer Blvd. Mount Juliet, TN 37122, USA (800) 333-4000 (800) 300-7502 www.SunriseMedical.com



Sunrise Medical GmbH Kahlbachring 2-4 D-69254 Malsch Deutschland Tel.: +49 (0) 7253/980-0 Fax: +49 (0) 7253/980-222 www.SunriseMedical.de

Thorns Road
Brierley Hill
West Midlands
DY5 2LD
England
Phone: 0845 605 66 88
Fax: 0845 605 66 89
www.SunriseMedical.co.uk

Sunrise Medical S.L. Polígono Bakiola, 41 48498 Arrankudiaga – Vizcaya España Tel.: +34 (0) 902142434 Fax: +34 (0) 946481575 www.SunriseMedical.es

Sunrise Medical Poland Sp. z o.o. ul. Elektronowa 6, 94-103 Łódź Polska Telefon: + 48 42 275 83 38 Fax: + 48 42 209 35 23 E-mail: pl@sunrisemedical.de www.Sunrise-Medical.pl

Sunrise Medical B.V.
Defensiedok 20
3433 NE Nieuwegein
The Netherlands
T: +31 (0)30 – 60 82 100
F: +31 (0)30 – 60 55 880
E: info@sunrisemedical.nl
www.SunriseMedical.nl

Sunrise Medical HCM B.V.
Vossenbeemd 104
5705 CL Helmond
The Netherlands
T: +31 (0)492 593 888
E: customerservice@sunrisemedical.nl
www.SunriseMedical.nl
www.SunriseMedical.eu
(International)

Sunrise Medical S.A.S ZAC de la Vrillonnerie 17 Rue Mickaël Faraday 37170 Chambray-Lès-Tours Tel: + 33 (0) 2 47 55 44 00 Email: info@sunrisemedical.fr www.SunriseMedical.fr

Sunrise Medical Canada Inc. 1000 Creditstone Rd., Unit #2 Concord, ON, L4K 4P8 Canada Phone: 1-800-263-3390 Fax: 1-800-561-5834

www.SunriseMedical.ca

© 2025 Sunrise Medical (US) LLC MK-100309 Rev. C